

# PHILIPS

## SmartMeeting

### Wireless Conference Microphone

with Sembly Meeting  
Assistant

Automatic minute taking

Instant meeting summaries

Automated action points

High-quality audio



PSE0501



Includes  
Sembly  
Team Plus plan\*



## Focus on your meeting, we take care of the rest

### Automated meeting minutes and insights

The Philips SmartMeeting Conference Microphone and Sembly Meeting Assistant take part in meetings with you as your dedicated note takers. The microphone's smart speech-enhancing and noise-filtering technology ensures clear and natural sounding calls. Sembly creates automatic transcripts, summaries and highlights action points and to dos for you. The solution helps you find out who said what easily and quickly after every meeting, even if you could not attend.

#### Quick and accurate meeting protocols

- Automatic minute taking to help you focus on your meetings
- Instant meeting summary so you know the outcome of every meeting at one glance
- Automated meeting action points for saving time
- Voice ID for clear speaker separation
- Sembly works with all major platforms such as Microsoft Teams, Google Meet, Zoom and GoToMeeting

#### Highest recording quality

- 360° recording with high-quality 6-array microphone for clear meeting recordings
- High-quality loudspeaker for understanding voices clearly
- Plug-and-play connectivity via Bluetooth or USB for easy setup
- Powerful long-lasting battery for up to 10 hours of use



No 1 in SPS global  
customer satisfaction  
survey 09/2019


# Highlights

## Focus on your meeting




Sembly will join any call it is invited to, introduce itself, and record the call. It can even attend a call when you're not there! You can focus on the conversation and not get distracted by having to take notes.

## Instant meeting summary

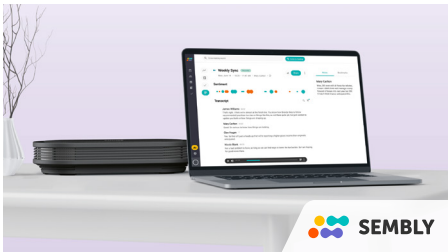

Shortly after a call, the transcript of the conversation will appear in the Sembly app, which you can read, search, and share as needed.

## Automated action points

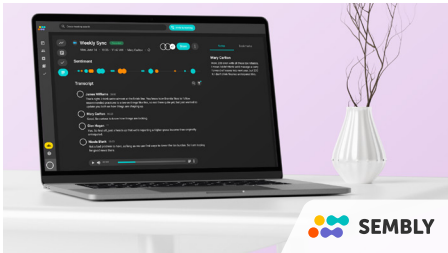

Sembly's smart AI tracks actions, issues, requirements and more to help you zoom-in on key items, in case you missed something during your call or just want to confirm specific details from the discussion.

## Clear speaker separation



Sembly offers advanced features such as the revolutionary VoiceID algorithm, which identify speakers in meetings and is able to separate the transcripts per person to see who said what. Each speaker is assigned their own virtual "voice fingerprint".

## Integrations



Sembly connects with all major platforms, such as Microsoft Teams, Google Meet, Zoom and GoToMeeting. Sembly automatically syncs with your Google or Outlook calendar. You can also invite Sembly to an unscheduled call at any time.

## 360° recording



The microphone comes with a noise-cancelling 6-array microphone to capture a radius of 6 meters and up to 12 speakers around the table. The smart speech-enhancing and noise-filtering technology ensures clear and natural sounding calls.

## High-quality loudspeaker



SmartMeeting solution comes with a high-quality loudspeaker which makes sure you can hear and understand every word which has been said by others in the meeting.

## Seamless connection



Start your calls instantly thanks to simple plug-and-play connectivity to your laptop or smartphone, using either USB or Bluetooth.

## Long-lasting battery



The high-capacity lithium battery makes sure you are always ready for your next conference call, lasting for up to 10 hours.

# Specifications

## Microphones

Number of microphones: 6  
Arrangement: ring  
Type: digital silicon microphone  
Sensitivity: -29 db  
Sampling rate/sampling bits: 48 kHz / 16 bit  
Recording distance: about 6 m / up to 12 people  
Recording coverage angle: horizontal 360°  
Signal-to-noise ratio: 65 dB  
Communication mode: full duplex

## Loudspeakers

Number of speakers: 4  
Speaker output power: 4 x 5 W

## Battery

Type: Li-ion  
Capacity: 5000 mAh  
Runtime: up to 10 hours  
Charging time: 4 hours

## Connectivity

USB: USB-C 2.0  
Bluetooth: 5.0  
Compatible with Bluetooth: 4.2/3.0/2.1  
Supports Bluetooth secure simple pairing

## System requirements

Operating system: macOS 12, Windows 10 or later

## Green specifications

Compliant to 2011/65/EU (RoHS)  
Lead-free soldered product

## Operation conditions

Temperature: 5° – 45° C / 41° – 113° F  
Humidity: 10 % – 90 %

## Dimensions and design

Product dimensions (W x D x H):  
30 x 14 x 6.12 cm / 11.8 x 5.5 x 2.4 in  
Weight: 980 g / 34.6 oz  
Color: dark grey

## Sembly Meeting Assistant

Team Plus plan: unlimited number of meetings in the first month, then up to 4 meetings per month. 10% off your purchase of a full subscription

Supported languages: English, French, Spanish, German, Italian, Portuguese, Dutch, Japanese (+28 more)

Supported applications: Microsoft Teams, Zoom, Google Meet, GoToMeeting

## Package contents

SmartMeeting Wireless Conference Microphone  
USB cable  
Power adapter  
User manual (including Sembly license code)

